



ring
Alarm



Say hello to Ring Alarm.



Ring Alarm Base Station

The central hub of your Ring Alarm system. Connects all of your Alarm devices to the Ring app, so you'll always stay in control of your home, wherever you are.

Connects to power with the included power supply.

Ring Keypad

Gives you hands-on control of your Ring Alarm system. Mount it on a wall or place it on a table near a door you use often.

Connects to power using the USB power supply and cable.





Ring Contact Sensor

Alerts you when a door or window is opened.

Uses the Sensor magnet and mounting hardware included with the Contact Sensor Install Kit.

Ring Motion Detector

Alerts you to movement inside your home.

Mounts using hardware included with the Motion Detector Install Kit.




Ring Range Extender

Extends the Z-Wave wireless network to reach distant Alarm devices.

1. Your home + Ring Alarm

This sample house shows how Ring Alarm can be set up in a home. You should customise your Ring Alarm setup to meet your own needs.

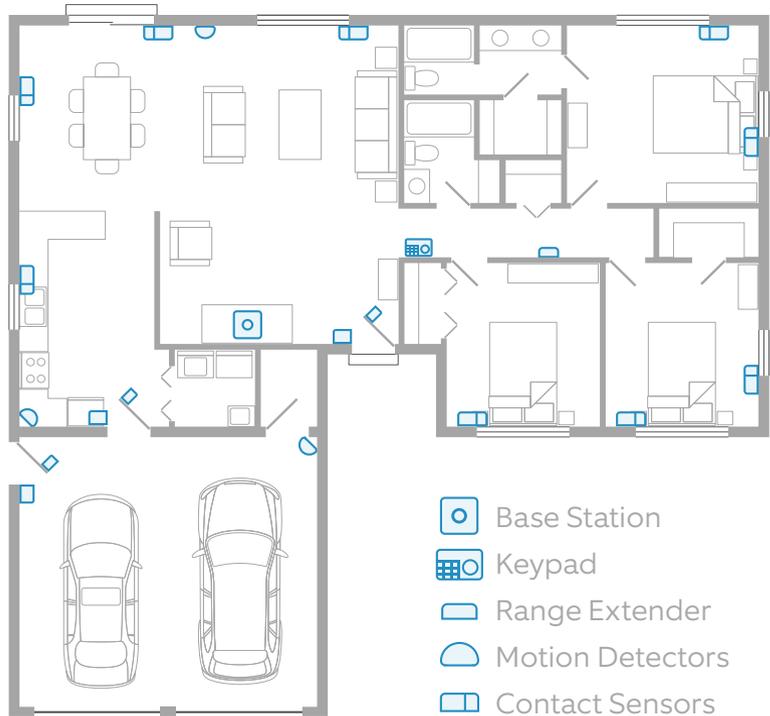

2. Set up your Ring account.

1. First, download the Ring app for your iOS or Android device.

- Before setting up your Ring Alarm, make sure you have the latest version of the Ring app from the app store.

2. Next, create your account.

- If you're new to Ring, tap **Create Account**. The app will ask you to enter your home or property address, your name, and email address, then ask you to create a password.
- If you already have a Ring account used for other Ring devices or Ring.com, use it to log in to the Ring app.

3. Now you're ready to begin setting up your Ring Alarm.

- From the **Menu**, tap **Set up a device**.
- Then tap **Security Devices**.
- Then tap Base Station.

Setting up your Ring Alarm is simple, and the Ring app will walk you through the process, step by step. If you have any questions or need help with your Alarm, start here:

ring.com/alarm-faq

3. Set up your Alarm Base Station.

The mobile app will now guide you through the setup process.

To allow the app to communicate with the Base Station during setup, you'll be prompted by the app to press the Pairing button on the back of the Base Station until the blue ring begins spinning.



The first time your Base Station connects to the internet, it will automatically begin a software update, which may take a few minutes. The Base Station LED light should show a blue ring with yellow spinning around. When it's complete, the LED will be solid blue.

Once your Base Station is set up, the LED light ring will use colour to tell you the status. Visit ring.com/alarm-faq for an explanation of Base Station LED light patterns.

Follow the app to continue the setup process.

LED patterns during pairing



Blue Spinning

Ready to pair



Blue Solid

Pairing successful



Blue Flashing

Pairing failed

LED patterns connecting to internet



White Climbing

Connecting to Wi-Fi



White Solid

Connected to Wi-Fi or Ethernet



White Flashing

Wi-Fi network connection failed

4. Set up Assisted Monitoring.

What is Assisted Monitoring?

Assisted Monitoring sends automated calls to you and your emergency contacts whenever your Ring Alarm detects a security issue and sounds the alarm. A subscription to Ring Protect Plus is needed before you can sign up for Assisted Monitoring. Your subscription will also give you Cellular Backup in case your internet goes down.

How do you get Assisted Monitoring?

1. After you add your Base Station, open a web browser, visit ring.com/protect-plans and subscribe to the Ring Protect Plus plan.
2. When you're done, use the Ring app to set up Assisted Monitoring, then continue setting up the rest of your Ring Alarm.

What is self monitoring?

If you skip Assisted Monitoring, your Ring Alarm will be self monitored. In an emergency, your Alarm will sound, but it won't signal the monitoring service, and your emergency contacts won't receive automated calls notifying them about the emergency.

If you choose self monitoring now, you can go back and sign up for Assisted Monitoring at any time.

See the chart on page 21 for an in-depth comparison of Assisted Monitoring vs. self monitoring.

Emergency Contacts

(Assisted Monitoring only)

When an alarm signal is received, the monitoring service will call your list of emergency contacts - people you trust to answer the call and take care of your home in case you can't be reached.

Your emergency contacts should be able to:

- Answer their phone and handle Alarm emergencies.
- Respond to your home if assistance is needed.
- Unlock your home to give emergency responders access to your home if necessary.
- Use your Ring Alarm and disarm it, if asked by authorities.

Save our number as a contact!
If we call during an emergency, you'll know it's us.

Ring Alarm: +44 800 802 1205

5. Set up your Alarm devices.

Setting up your Ring Alarm security devices involves three steps:



Connect

the device to
your Ring Alarm.



Configure

any unique settings
as needed.



Install

the device
in your home.

For the easiest setup, complete all three steps for each device before moving on to the next one. Using the app and this guide, we'll help you position your Alarm to improve the security of your home.



Don't pull out all of the tabs at once! It can make setting up your Ring Alarm a lot more complicated. Wait until you're ready to set up a certain device, then only pull its tab when the app prompts you.

If you need to take a break and finish adding any of your security devices later, you can close the app. When you're ready, simply reopen the Ring app and tap the **Set up a device** button on the dashboard or side menu.

Understanding Ring Alarm device codes.

Your Ring Alarm kit comes with a lot of devices. Each device has a unique QR code and a 5-digit code on the back.

When working in the app, you can use this code to identify the device you're working with. These sample images show you where you will find QR codes on your Ring Alarm devices.




Back of Motion Detector



Back of Contact Sensor

Range Extender


Range Extenders expand the range of your Ring Alarm network and enable your devices to communicate with the Base Station.

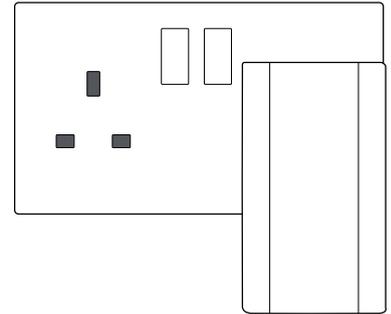

1 Connect To connect your Range Extender, plug it into any socket for pairing.

2 Configure Using the app, give it a unique name and assign it to a room.

3 Install Plug the Range Extender into a socket between your Base Station and one or more Alarm devices.

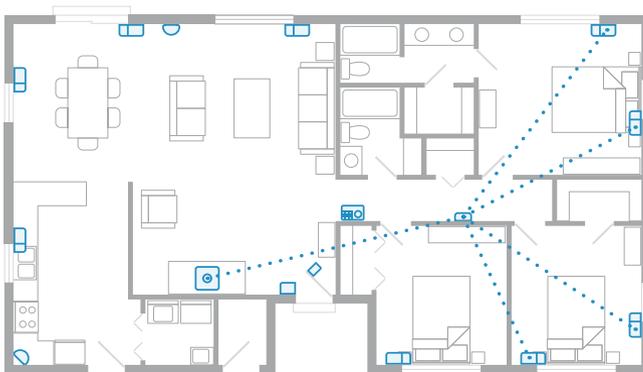


The Range Extender works best when it's placed between your Base Station and your most distant Alarm devices. You may need to move this around to different sockets within your home to find the best placement.

Contact Sensor

Contact Sensors can be installed on any door or window. It doesn't matter which direction you install them or whether the Sensor or magnet goes on the trim, as long as the notches on the Sensor and magnet line up and are no more than 1.27cm (1/2") apart.



If you have multiple Contact Sensors to add to your Ring Alarm, remember to connect, configure and install Sensors one at a time.

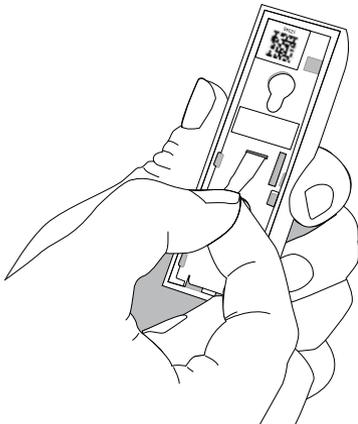

We recommend installing Contact Sensors on every door and window that could be used to gain access to your home. This includes all first floor windows, and any second floor windows above a garage, porch, or large tree.

1

Connect

To connect a Contact Sensor, pull the tab out of the back.

2

Configure

Using the app, choose the Sensor placement (Door or Window), give it a unique name describing the location, and assign it to a room.

Door and Window Settings: If you're using the Contact Sensor on a door, remember to configure the Placement setting to "Door", then decide if it's a primary or secondary door. Primary doors have Entry and Exit Delays to prevent you from accidentally triggering the alarm.

See page 20 to learn about Entry and Exit Delays.

3




Install

1. Find the brackets for the back of the Sensor and magnet in the accessory bag.
2. Choose a mounting location (on the non-hinged side of the door) where the Sensor and magnet will be no more than 1.27cm (1/2") apart, and the notches on the side of the two parts will be aligned (see right).
3. Mount the brackets using the included tape or screws.
4. Snap the Sensor and magnet onto their brackets.

Tampering a Sensor: Opening a Sensor cover will show that the Sensor is “tampered” within the Ring app. When you close the cover, the Sensor should return to normal.

If you need to arm your Alarm while a Sensor is tampered, you will be prompted to bypass it to continue arming.

See page 19 to learn about Bypassing Sensors.

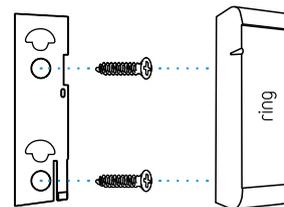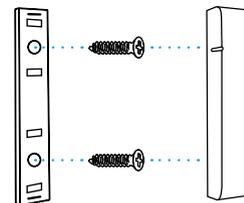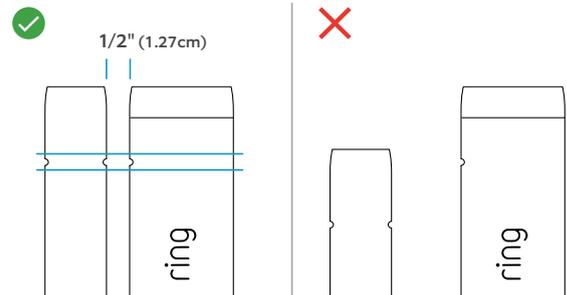

Motion Detector

Motion Detectors are designed to be smart. They detect movement through rooms and hallways which an intruder would be likely to pass through, while allowing you and your family to move freely through your home.


In **Normal Mode**, your sensor detects motion constantly, but will only notify you to the first detection. After three minutes of no activity, it will restore and be ready to notify you again.

In **Test Mode**, your sensor detects motion constantly and will notify you about every 15 seconds. This can help you test for blind spots, pets, and other environmental triggers.


What you need to know about your Motion Detector:

- Should be installed 2.1m (7') above the floor.
- Can be placed in a corner or on a flat wall (see illustrations).
- Requires a line of sight view of the room or area with no obstacles or blind spots.
- Should never face a heat source such as a stove, fireplace or windows with direct sun.
- Designed to ignore pets under 22kg (50lbs) when set to the lowest motion sensitivity settings.

Motion Detector on a wall

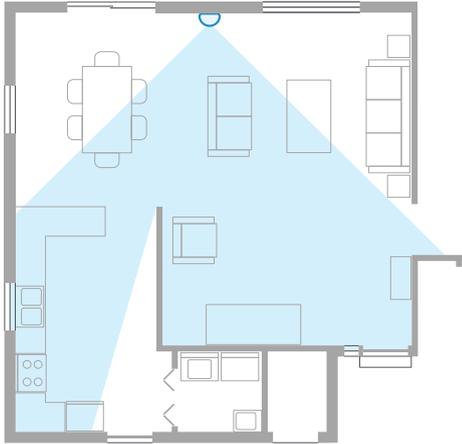

Motion Detector in a corner

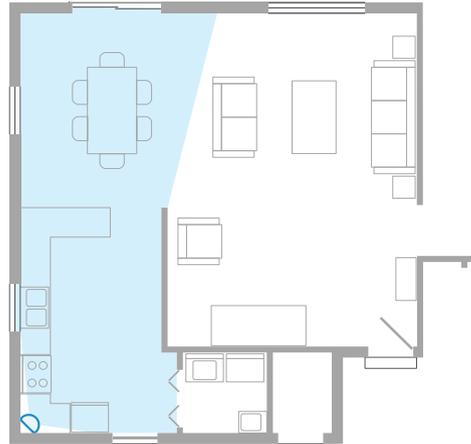

1 Connect

To connect your Motion Detector, pull the tab out of the back.

2 Configure

Using the app, decide if this Motion Detector will be used in an entryway or a room, then give it a unique name and assign it to a room.

3 Install

1. Locate the bracket for the back of the Detector in the accessory bag.
2. Securely mount the bracket using the included tape or screws.
3. Snap the Motion Detector onto its bracket.

Keypad

You'll use your Keypad to arm and disarm your Alarm, so we recommend that you place it in the hallway or near the door you most often use to exit and enter. Some people install a second Keypad in their bedroom for easy access at night.


- 1 Connect** Using the steps shown in the app, plug the Keypad into a socket with the included USB cable and wall adapter.
- 2 Configure** Give your Keypad a unique name and add it to a room. Don't forget, you must create a personal access code, which is used to arm and disarm your Alarm.
- 3 Install** The Keypad can be mounted flush on a wall or placed on a table using the reversible bracket, and can be left plugged in or unplugged. Follow the instructions on the next page.

To use the Ring Keypad on a table:

1. Slide the bracket off the Keypad.
2. Flip the bracket over, then slide it back onto the Keypad.

To install the Ring Keypad on a wall:

1. Slide the bracket off the Keypad.
2. Place the mounting bracket on the wall, then use the wall anchors and screws from your kit to fasten the bracket to the wall. (If using anchors, you should pre-drill holes.)
3. Slide the Keypad onto the bracket.

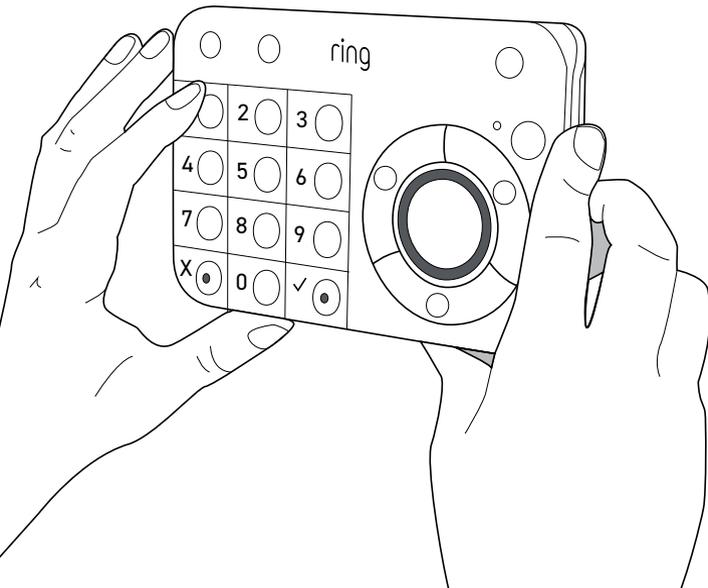


6. Learn to use Ring Alarm.

Alarm Modes

Your Alarm system has three Security Modes to choose from: Disarmed, Away, and Home. You can switch between them using the Keypad and the Ring app.

Away Mode

When you arm in Away Mode, by default all Sensors are armed. This Mode should be used when you go out and there's no one at home.

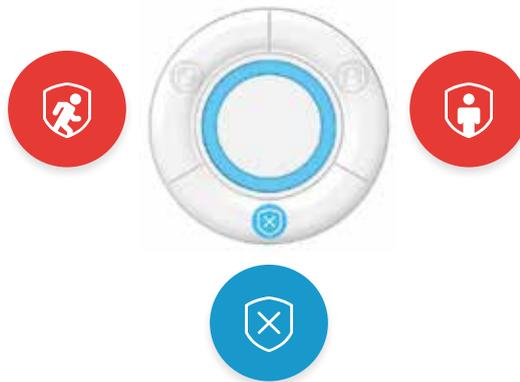

Home Mode

When you arm in Home Mode, only door and window Sensors are armed by default. This Mode should be used when someone wants to stay home and feel safe.

Disarmed Mode

No Sensors inside your home are armed. This is useful when you're at home and want the freedom to go in and out easily.

How to Arm and Disarm your Ring Alarm:

Using the Keypad, enter your personal access code, and then press the Disarmed, Away, or Home Mode button.

Using the app, simply tap the Mode of your choice.



Disarming will cancel your alarm signal.

If you have Assisted Monitoring, disarming the system during an alarm cancels the alarm signal sent to the monitoring service. If you disarm within 60 seconds of the alarm sounding, you may not receive calls from the monitoring service. In an emergency, you can allow the alarm to continue sounding without disarming until you're sure it's not needed.

Bypassing Sensors

The bypass feature allows you to arm your Alarm and ignore a Sensor until the next time you arm your Alarm. It's most often used when you want to arm your Alarm and need to leave a window open or ignore a device issue now and resolve it at a later time.

Using your Keypad: When you try to arm and need to bypass a Sensor, your Keypad will prompt you "Sensors require bypass." The **!** icon in the top right corner will turn on, and the **✓** button will blink. You can press the **✓** button to accept or do nothing to cancel arming.

Using the app: If you try to arm your Alarm and a Sensor needs to be bypassed, you'll get a notification.



Choosing which Sensors are armed in each mode


Each Security Mode arms specific groups of Sensors. By default, Away Mode arms all Sensors and Home Mode arms only Contact Sensors used on doors and windows. You can customise which Sensors are armed in Home and Away Mode. For example, if you want to avoid arming a specific door while in Home Mode, you can adjust this using Mode Settings.

Understanding Entry & Exit Delay

Exit Delay gives you a short period of time to leave your home once you've armed Ring Alarm. You'll hear a series of chirps to remind you that there is only a few seconds to exit your home and close the door. When your Exit Delay ends, your Alarm is in Armed Mode. Opening your door will trigger the Entry Delay to begin counting down.

Entry Delay gives you a short time to disarm your Ring Alarm when entering your home. You'll hear reminder chirps during the delay, and when the delay ends, if you don't disarm, your Ring Alarm siren will sound.

To use Entry and Exit Delays, set the Contact Sensor Placement setting to Main Door. Customise each delay for any time between 0 seconds (no delay) and 180 seconds (3 minutes). Just make sure you have enough time to arm and disarm your Alarm.

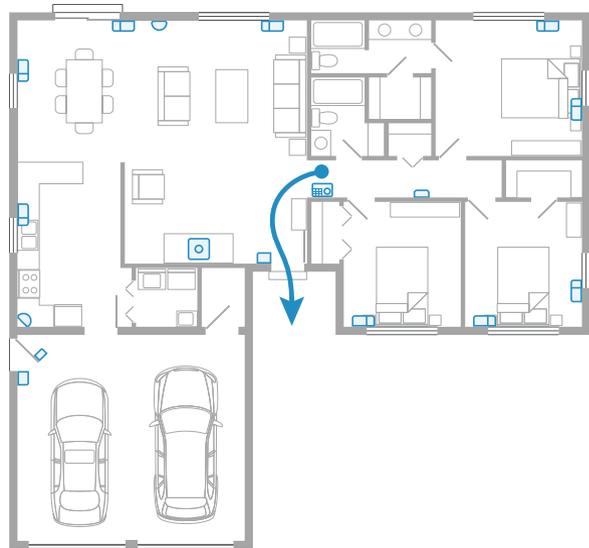

What happens when your Ring Alarm begins to sound?

Your Ring Alarm experience may differ depending on whether or not you've signed up for Assisted Monitoring. Assisted Monitoring is only available with a subscription to Ring Protect Plus.

	Assisted Monitoring with Ring Protect Plus	Self Monitoring
When a security threat is detected, the Sensor sends a signal to your phone or email (if turned on).	✓	✓
Ring Alarm sends a notification to your phone, and email (if turned on). Shared Users on your account also get notifications.	✓	✓
Ring Alarm sends the signal to the monitoring service.	✓	✗
Cellular backup sends the signal if your internet is down.	✓	✗
The monitoring service calls your list of emergency contacts, leaving voicemail messages until a contact answers.	✓	✗
The monitoring service continues calling emergency contacts every 15 minutes if Ring Alarm is not disarmed.	✓	✗

Assisted Monitoring is only available with a subscription to Ring Protect Plus. Visit ring.com/protect-plans to learn more.

Owners and Shared Users

You can invite trusted people to use your Ring Alarm, and provide them with limited access.

	Owners The Owner is the master account used to set up your Ring Alarm.	Shared Users Best for family members, trusted friends, caregivers, and pet sitters.	Guest Users Best used for short-term visitors and contractors.
Arm and disarm via Keypad with access code	✓	✓	✓
Arm and disarm via app	✓	✓	✗
View cameras	✓	✓	✗
Change device settings	✓	✗	✗
Add and delete users	✓	✗	✗
Access billing and account settings	✓	✗	✗
Requires an email address for account setup	✓	✓	✗

Adding Shared and Guest Users

To add users to your account:


1. Open the side menu in the Ring app.
2. Tap **Settings**, then tap **Users**.
3. Add a user:
 - **Android:** Tap the  icon in the bottom right corner.
 - **iOS:** Tap the **Add User** button at the bottom of the screen.
 - **Web:** Tap the  button in the blue header bar.
4. Tap the user type you want to add.
 - **Shared Users:** Choose a unique access code to arm and disarm via the Keypad, then tap **Send Invite**. (If a Shared User doesn't accept your invitation via email within seven days, it's cancelled. You can always resend it using the app.)
 - **Guest Users:** Choose an access code they can use with the Keypad, tap **Done**, then give the access code to your Guest User.

To delete a Shared or Guest User from your Ring account, tap on the user's name, then tap **Remove User**.

To remove only Alarm access without deleting the user, tap the user's name, then tap checkmark next to Alarm Base Station.

How to trigger Panic alarm:

Ring Alarm features a Panic alarm just in case an emergency occurs while you're at home. To trigger it, press and hold the X and ✓ buttons on the Keypad at the same time for three seconds.

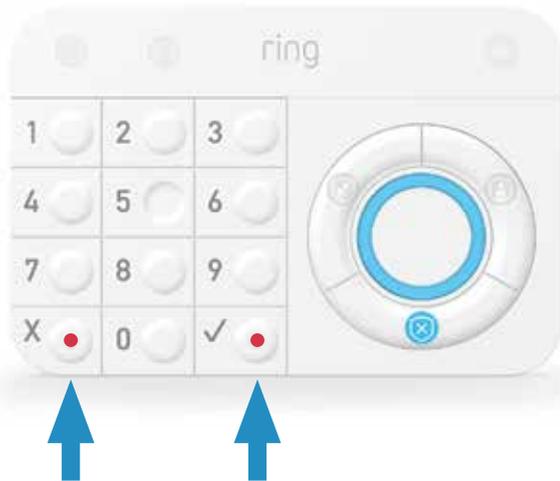

Triggering the Panic alarm will sound the siren. If you have Assisted Monitoring, it will send a signal to the monitoring service, which will call your emergency contacts, one at a time, until someone is reached.

Managing your alerts

Your Ring Alarm system can send notifications to your phone and email

- When a device goes offline
- When the alarm begins to sound
- If a device has a low battery

and for a variety of other events.

To adjust which notifications you receive, open the side menu, tap **Settings**, and select **Alarm Alerts**. You and your Shared Users can turn your preferred notifications on and off.

7. Let's cover some security basics.

Practise, Practise, Practise.

Everyone in your home should practise arming and disarming your Ring Alarm as often as possible. In addition to reducing false alarms, it will help you identify how to adjust settings and customise the Alarm for your home.

These suggestions can also help you feel more comfortable using your Ring Alarm:

- Have everyone in your home download the app and give them Shared User access.
- Check that your Motion Detector coverage doesn't have any blind spots.
- Adjust your Motion Detectors so pets don't set off the alarm.*
- Check that the Exit and Entry Delays allow you enough time to leave and enter your home.
- Have all emergency contacts save the Ring Alarm number as a phone contact with a unique ringtone.
- Ensure your emergency contact list and phone numbers are up to date.

* Motion Detectors are designed to ignore pets weighing 22kg (50lbs) or less, when the Motion Detector is mounted at a 2.1m (7') height and set to the lowest sensitivity levels.

Preventing false alarms

A false alarm occurs when someone or something accidentally triggers your Alarm and the siren sounds, but there is no real emergency.

The best way to prevent false alarms is to understand what causes them.

Causes of false alarms

- Using Entry and Exit Delays that are too short.
- Not setting up an Entry and Exit Delay on the doors you use most.
- Poorly-planned device set up, such as placing a Motion Detector across from a busy window.
- Arming in Away Mode instead of Home Mode when you're at home.

Ways to prevent false alarms

- Make your emergency contacts Shared Users on your account.
- Make sure that everyone in your home is comfortable arming and disarming the Alarm.
- Save the Ring monitoring service phone number +44 800 802 1205 as a contact in your phone.

Visit ring.com/alarm-faq for more tips on avoiding false alarms.

8. Any questions?

We've got answers!

Sometimes you need a little extra help with...

- Installing Sensors and replacing batteries.
- Understanding the lights on your Keypad and Base Station.
- Using your Ring Alarm with Amazon Alexa.
- Avoiding false alarms.

We recommend that you start here:

ring.com/alarm-faq

You'll find answers to the most commonly asked questions and other things you didn't even think to ask. Learn everything you wanted to know about your Ring Alarm.

 ring.com/help

 +44 1727 263045

 +80087009781

 +80087009781

 +61 1 300 205 983

 +64 9 887 9871

 +52 55 8526 5445

 +54 11 5031 9543

 +57 1 381 9843

 +56 22 405 3059

 +507 833 6750

To review your warranty coverage, please visit www.ring.com/warranty.

(C) 2019 Ring LLC or its affiliates.

Ring and all related logos are trademarks of Ring LLC or its affiliates.

Last updated: 06/05/19